


Electrical TV Lift mechanism TS750



Parts included with your TV Lift

- Lift unit (#1)
- Power supply (#2)
- R.F. Module (#3)
- Rocker switch (#4)
- Remote Control (not shown)
- Plasma screen brackets (#6a)
- Lift Brackets (#6b)
- Lid Lifter (#7)

The TS750 TV Lift is designed to operate loaded with between minimum 5 and maximum 100kg. It is important that the lift is used loaded to at least the minimum kg to avoid excessive operation noise especially on the down cycle.

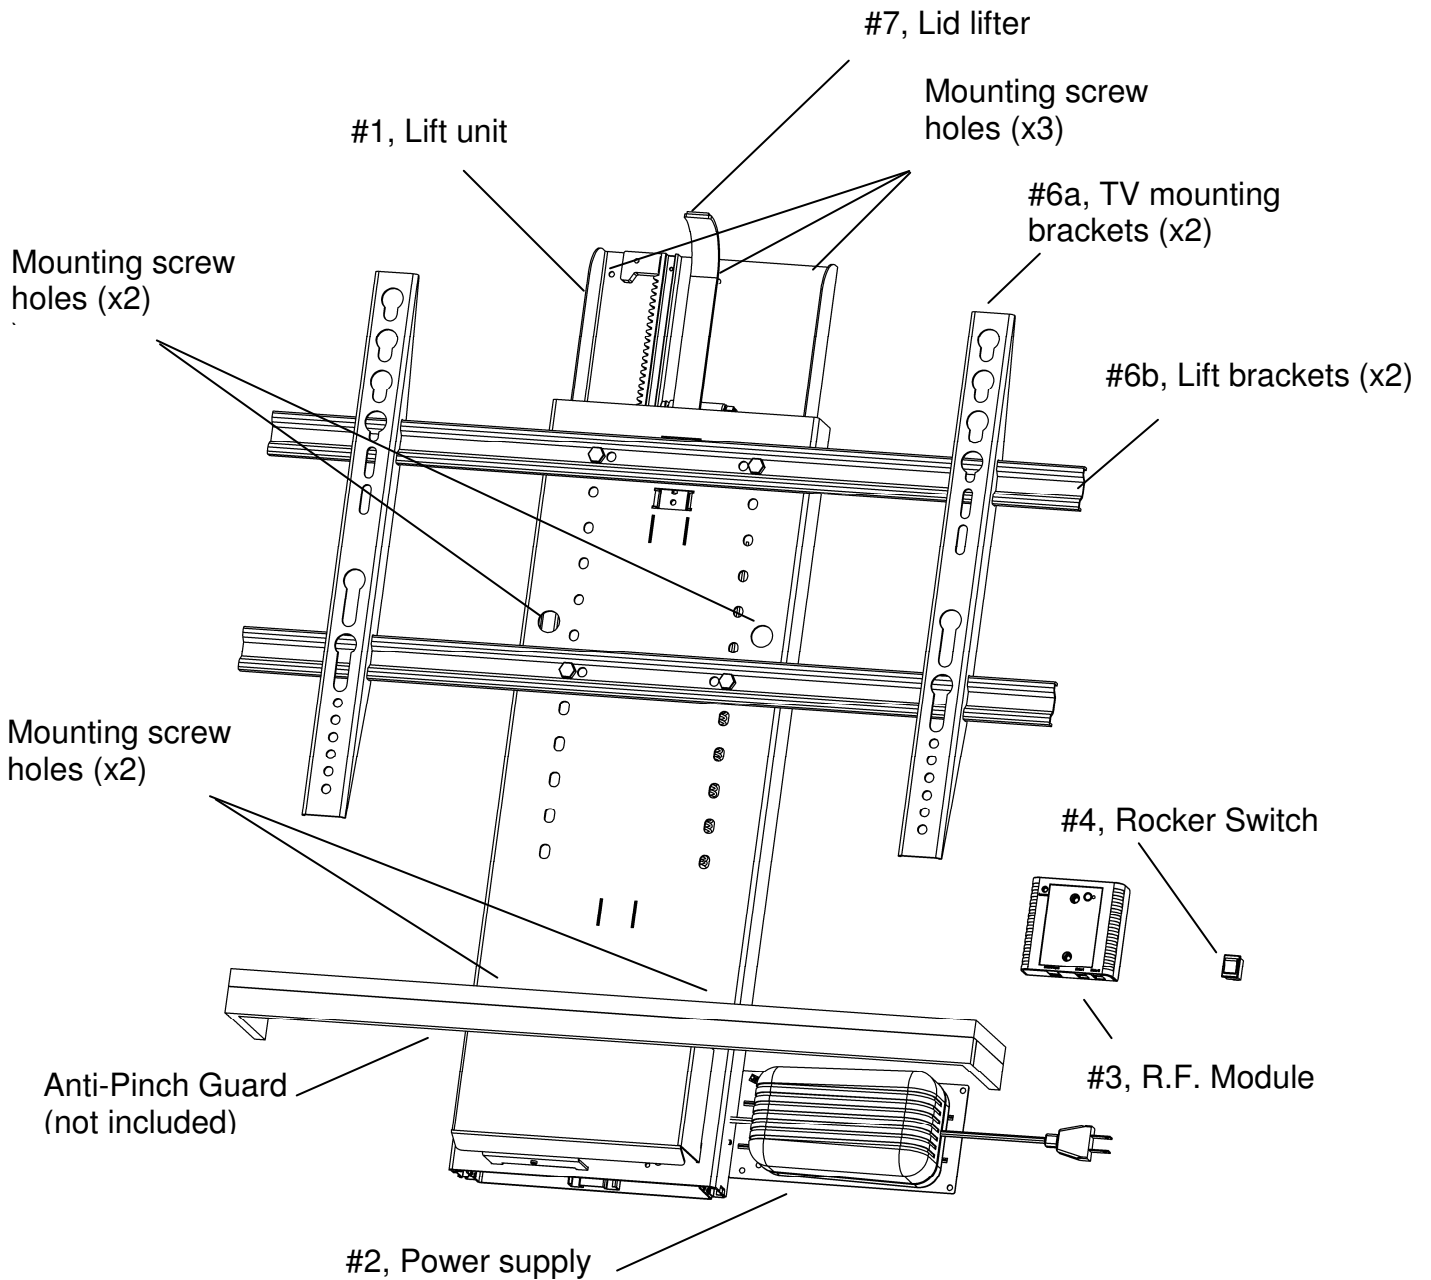

Important safety Instructions

CAUTION: Before you begin any of the Installation procedures on page 3, read and follow the warnings and safety instructions on this page.

WARNING ! THIS IS NOT A TOY !

**WARNING ! CHILDREN SHOULD NOT OPERATE LIFT OR
REMOTE CONTROL !**

Use the following safety guidelines to help protect your lift from potential damage and to ensure your own personal safety.

- Read all the installation instructions before testing or installing your lift.
- Read and follow all safety instructions.
- Keep remote control out of reach of children.
- To prevent bodily injury keep hands and clothing away from the lift while the lift is in operation.
- Before installing the lift or working with its connections, unplug the lift from the electrical shock.
- Do not install the lift, power supply or R.F. module in places subject to extreme temperatures for example near a radiator, or heating vent.
- To avoid damaging the power supply, R.F. module and power cord, do not put anything on it or place it where it could become damaged.
- Unplug the lift in the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has spilled into the lift, power supply or RF module.
 - If the lift, power supply or RF module has been exposed to rain or water.
 - If the lift exhibits a distinct change in performance, indicating a need for servicing.

Mounting Instruction for the TV Lift

- 1) Remove all contents from packaging and compare with parts lists. Test the lift at the same time. Refer to the drawing and to the user instruction packed along with the remote unit proceed as follows: Connect the lift (#1) to the RF Module (#3). Once all connections have been made, plug power supply (#2) into the wall socket. Position lift vertically. Test lift using rocker switch (#4) – have lift travel a few inches and then back down. Use same method to test remote. The rocker switch must be pressed continuously to make lift work. Releasing switch will stop unit immediately. The remote starts the lift to move continuously by one single pres on “up” or “down” button. The lift stops again by pressing either “up” or “down” button again.

Please see “Helpful Hints” on page 4 before continuing

- 2) Fasten the power supply (#2) on the back of the cabinet on the right side of the unit as shown in the drawing. Secure with four screws.
- 3) Place the lift unit (#1) on the back panel of cabinet in a location that will allow full up and down movement of TV. Unit must be a minimum of 1/8” down from the top edge of the cabinet.
- 4) Fasten the unit securely to the cabinet using the 7 screw holes shown in the drawing on page one. Screws must be appropriate for the material being used. **Lift must be mounted vertically (using a level) inside cabinet.**
- 5) Fasten the power supply (#2) to the back of the cabinet on the right side of the unit as shown in the drawing. Secure with four screws.
- 6) Fasten R.F. Module (#3) next to the power supply leaving enough room to connect wires.
- 7) Mount rocker switch (#4) to the upper part of the cabinet towards the front by cutting a hole and pressing the switch into place. Secure excess wire to keep away from moving parts.
- 8) Make connections as done previously for testing. Plug the power cord into wall outlet and test the lift.
- 9) Slide both flat screen brackets (#6a) onto the two lift brackets (#6b) as shown in the drawing. Adjust the brackets to fit the mounting holes on the TV. Secure brackets to the TV – MAKE SURE TV IS CENTERED ON BRACKETS.
- 10) Raise lift to uppermost position. Place TV in best position on lift based on the size of the TV. Put bolts on lift bracket through lift front and bolt into position. Lower lift with TV, making sure the TV does not extend past top edge of cabinet in the lowered position.
- 11) Insert lid lift (#7) into slot on lift with curve facing toward the front. The top of the lifter curve must be above the top of the TV. With lift in the up position, use allen wrench to secure lid lifter in place.

The instructions above are based on a typical cabinet installation.

Helpful Hints:

- a) Test lift mechanism and remote / rocker switch before mounting in cabinet.
- b) Mount TV lift and electronics to plywood panel and attach to inside back of cabinet using appropriate number of screws. This allows all components to be removed from the cabinet if necessary. If this is not possible, create an access panel to the electronics.
- c) Create an Anti-Pinch Guard (#8) and mount to metal box on lift under TV using double-stick tape, Velcro, etc that will allow the guard to disengage under pressure.

Declaration of conformity

We hereby declare, under our sole responsibility that the following products:

- electric TV-lift mechanism product type TS750

which are covered by this statement, are in conformity with the following standards and other normative documents::

- Counsel Directive 89/336/EØF with later changes
- Counsel Directive 73/23/EØF with later changes

Manufacturer:

ConSet A/S, Staalvej 14-16, DK-6900 Skjern, Denmark

Tel: +45 9680 0080, Fax: +45 9680 0081, conset@conset.com, www.conset.com

The information in this document is subject to change without notice.

EF – komponenterklæring type "bilag II B"

EEC Declaration of a component "appendix II B"

Fabrikant (navn og adresse):

Manufacturer (name and address):

ConSet A/S, Staalvej 14-16, 6900 Skjern, Denmark

Erklærer hermed, at følgende produkt:

Hereby certify that the following product:

Benævnelse, mærke, type:

TS750 7BXX1

Description, ID/mark, type:

Evt. serienr.:

Serial No. if any:

Evt. bemyndigede organ og nr.

Teknologisk Institut, Århus, Denmark

Notified body if any:

Evt. EF- typeattest:

EEC-type certificate if any:

Evt. Harmoniserede standarder:

Harmonised standards if any:

Er fremstillet i overensstemmelse med bekendtgørelse nr. 561 af 24. juni 1994, der gennemfører EUROPA-PARLAMENTETS OG RÅDETS DIREKTIV 98/37/EF

Made according to announcement No. 561 of June 24, 1994 that implements the DIRECTIV 98/37/EF

Ovennævnte produkt må **IKKE** tages i brug, før den maskine, hvori det er indbygget eller hvortil det skal anvendes er erklæret i overensstemmelse med alle relevante bestemmelser.

Above product may **not** be taken into use, before the machine into which it has been built in or to which purpose it must be used for, conform to any relevant regulations.

Navn, titel og underskrift af fabrikanten:

Name, title and signature of manufacturer:

Michael Overgaard, Direktør

05-11-2007

Dato/date

Underskrift/signature